A1004

2-Wire Audio Receiver


User Manual


ATIGO

Contents

Audio Receiver A1004 3
System Layout 3
Installation Setup 4
  Setup Call Address 4
    Listening Mode: 4
  Setup Master / Slave settings 4
    Key setup 4
  Calling test 4
User Personalisation Setup 4
  Ring tone volume 4
  Ring Tone Melody 4
Operation 4
  Accept Calling 4
  Unlock 4
  Set to Do Not Disturb 5
  Intercom Call 5
  Enable Divert 5
Restoring Factory Settings 5
Specifications 5


Audio Receiver A1004

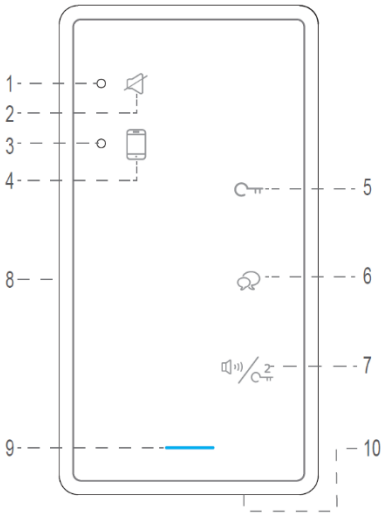

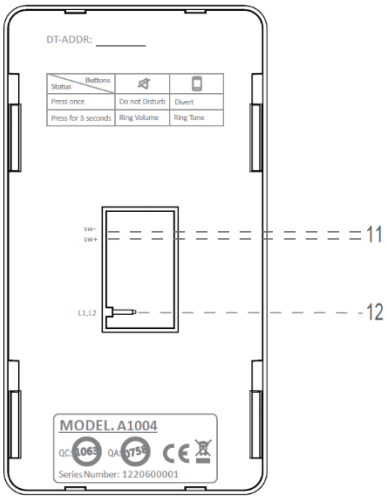


1. DND LED
2. DND key
3. Divert LED
4. Divert key
5. 1st lock unlock Key
6. Talk key
7. 2nd unlock key
8. Speaker
9. Logo LED
10. Micphone
11. Doorbell button cable
12. BUS line

System Layout

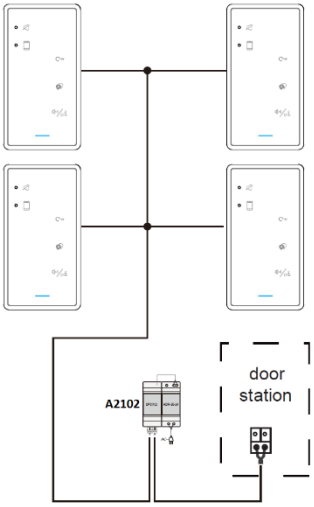

With only A1004. No Video monitors

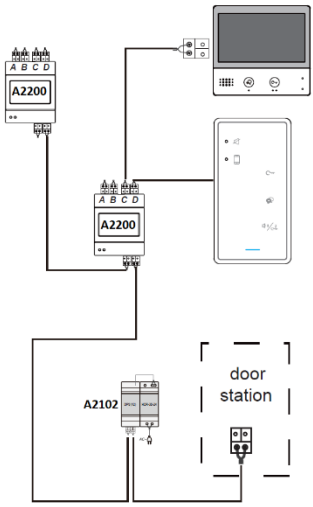

Mixed A1004 with Video monitor. Distributor is necessary for mixed systems

Installation Setup

Complete the installation setup within 2 minutes after powering on.


Setup Call Address

The address for A1004 could only be 01~32. By default, address is 01

Listening Mode:

- Connect A1004 and door station to the power supply and then power on.
- Set A1004 to Listening mode, by pressing and holding for 6s until LED flashes then release. When the logo LED flashes, the A1004 is in listening mode.
- You now have 90 seconds to call the corresponding flat number from the door station. The A1004 will be them 0programmed to the button at the door station.



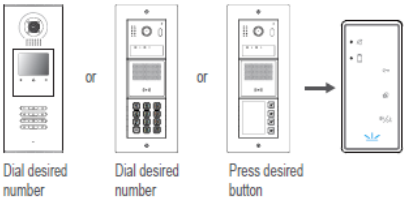

Only the A1004 in listening mode will be set up.

Powering off the A1004 will not lose the programmed address.


Setup Master / Slave settings

A1004 can be set as Master or Slave by key setup. The default setting is Master.

Key setup

This is a cyclic configuration between slave and master.

- Power on A1004
- Press and hold for 9s. Release when and LEDs begins to flash.
- 2 short beeps represents Slave and one long beep represents Master.

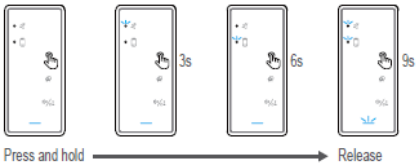

Single Beep – Master
Double Beep – Slave

Calling test

After setup, the A1004 can initiate a call to the door station.

Press and hold for 3s until flashes. The A1004 will call the existing door station.

User Personalisation Setup

Ring tone volume

There are two levels of volume, (High and Low). Subsequent presses wil cycle to the next level.



Press and hold for 3 seconds. Release when it starts to flash.

A1004 will play with the current volume

Ring Tone Melody

A1004 has 4 ring tone melodies, the setup is a cyclic configuration.

- Press and hold for 3s. Release when flashes.
- A1004 will play the current ring tone set for door station calling, intercom calling and doorbell call. Further presses will cycle through melody sets.

Operation

Accept Calling

When A1004 rings, press to accept call, press again to end call.

Unlock

Only after receiving a call, press to unlock 1st lock, press to unlock lock 2nd lock.

Set to Do Not Disturb
Press once to enable “Do Not Disturb”

LED solid means in “Do Not Disturb” is on.

Press again to disable.

Intercom Call
In standby, press to initiate an intercom call with a handset of the same address. Press again to end call.

Enable Divert
In standby, press once to enable “Call Divert”. After 10s if LED still solid, then handset in “Call Divert”. Press again to disable.

Note: function, requires additional accessory or specific door station to work, and does not working for ATIGO standard door station.

Restoring Factory Settings
Restore the handset to factory settings by following these steps:

- Disconnect the A1004 from bus line, wait for 30s, and re-conect.
- Within 10s after power up, press and hold for 12s, release when and LEDs flash.
- A long beep means all setting rest to factory default.

Specifications
Power Supply: DC20~28V

Power Consumption: standby 6mA, working 60mA

Working Temperature: -15ºC ~ +55ºC;

Wiring: 2 wire, non-polarity

Dimensions: 150(H)X80(W)X13.5(D)mm